




www.tuneyourengine.com

1998 - 2002 Honda Accord ECU Diagram

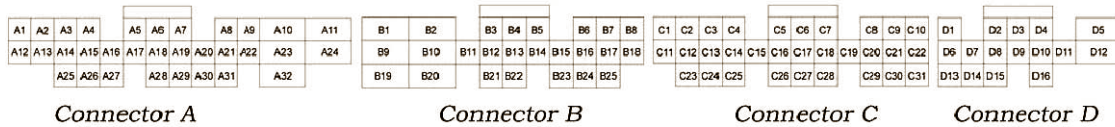

Connector A

Pin #	Name	Signal Type
A19	Engine Speed Pulse	RPM
A23	Secondary O2 Sensor	Analog
A32	Brake Switch	Analog

Connector B

Pin #	Name	Signal Type
B10	Power Ground	Ground
B12	VTEC Solenoid Valve	Analog

Connector C

Pin #	Name	Signal Type
C10	VTEC Pressure Switch	Analog
C16	Primary O2 Sensor	Analog
C17	MAP Sensor	Analog 0.32V @ -13.9 PSI 4.84V @ 10.94 PSI
C23	Vehicle Speed Sensor	Speed
C25	Intake Air Temperature Sensor	Analog
C26	Engine Coolant Temperature Sensor	Analog
C27	Throttle Position Sensor	Analog