




www.tuneyourengine.com

2002 Mitsubishi Lancer 2.4L (Manual Trans) ECU Diagram

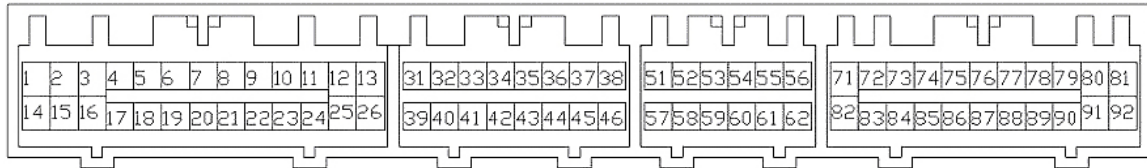

Pin #	Name	Signal Type
10	Ignition Control Module	RPM
13	Power Ground	Ground
58	Tachometer Output	Speed
72	Intake Air Temperature Sensor	Analog
73	MAP Sensor	Analog
75	Primary O2 Sensor	Analog
76	Secondary O2 Sensor	Analog
83	Engine Coolant Temperature Sensor	Analog
84	Throttle Position Sensor	Analog
86	Vehicle Speed Sensor	Speed
91	Power Ground	Ground