




www.tuneyourengine.com

1995 - 1997 Nissan Sentra (excludes 97 1.6L) ECU Diagram

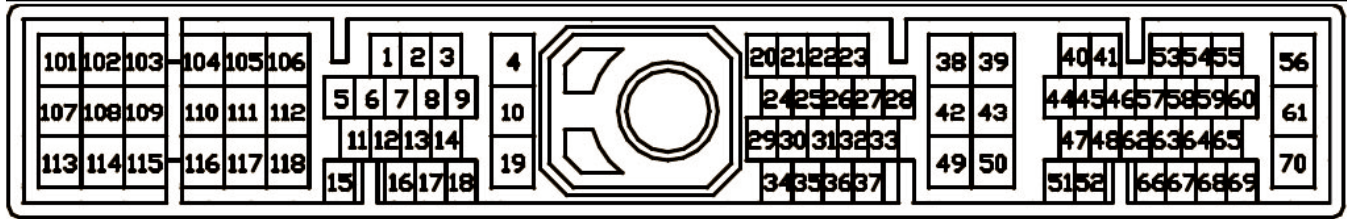

Pin #	Name	Signal Type
3	Tachometer Signal	RPM
23	Throttle Position Sensor	Analog
26	Vehicle Speed Sensor	Speed
33	Throttle Position Sensor (A/T)	Analog
46	O2 Sensor Signal (Front)	Analog
47	Mass Air Flow Sensor	Analog
48	Mass Air Flow Sensor Ground	Ground
50	Sensor Ground	Ground
51	Engine Coolant Temperature Sensor	Analog
52	O2 Sensor Signal (Rear)	Analog
63	Intake Air Temperature Sensor	Analog
70	Power Supply (Aux)	Power
102	Injector # 1	Speed
104	Injector # 3	Speed
107	Injector # 2	Speed
109	Injector # 4	Speed
112	Power Ground (Electronic Concentrated Control System)	Ground
118	Power Ground (Electronic Concentrated Control System)	Ground