




www.tuneyourengine.com

1993 - 1995 Toyota MR2 Turbo ECU Diagram

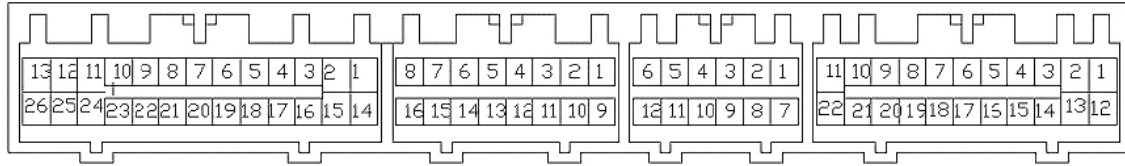

Connector A

Connector B

Connector C

Connector D

Connector A

Pin #	Name	Signal Type
A20	Ignition Control Module	RPM
A26	Power Ground	Ground

Connector B

Pin #	Name	Signal Type
B3	Intake Air Temperature Sensor	Analog
B4	Engine Coolant Temperature Sensor	Analog
B5	MAP Sensor	Analog
B6	Primary O2 Sensor	Analog
B11	Throttle Position Sensor	Analog

Connector D

Pin #	Name	Signal Type
D4	Brake Switch	Analog
D9	Vehicle Speed Sensor	Speed