




www.tuneyourengine.com

1993 - 1998 Toyota Supra ECU Diagram

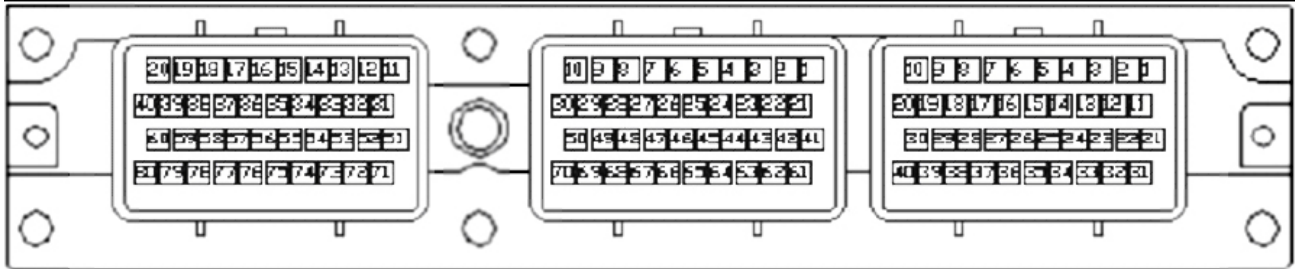

Connector B

Connector A

Connector A

Pin #	Name	Signal Type
A2	Vehicle Speed Sensor	Speed

Connector B

Pin #	Name	Signal Type
B43	Throttle Position Sensor	Analog
B44	Engine Coolant Temperature Sensor	Analog
B45	Intake Air Temperature Sensor	Analog
B47	Primary O2 Sensor	Analog
B48	Secondary O2 Sensor	Analog
B57	Ignition Control Module	RPM
B62	MAP Sensor	Analog
B69	Power Ground	Ground